


IGNITION KEY CYLINDER LIGHT

COMPONENTS


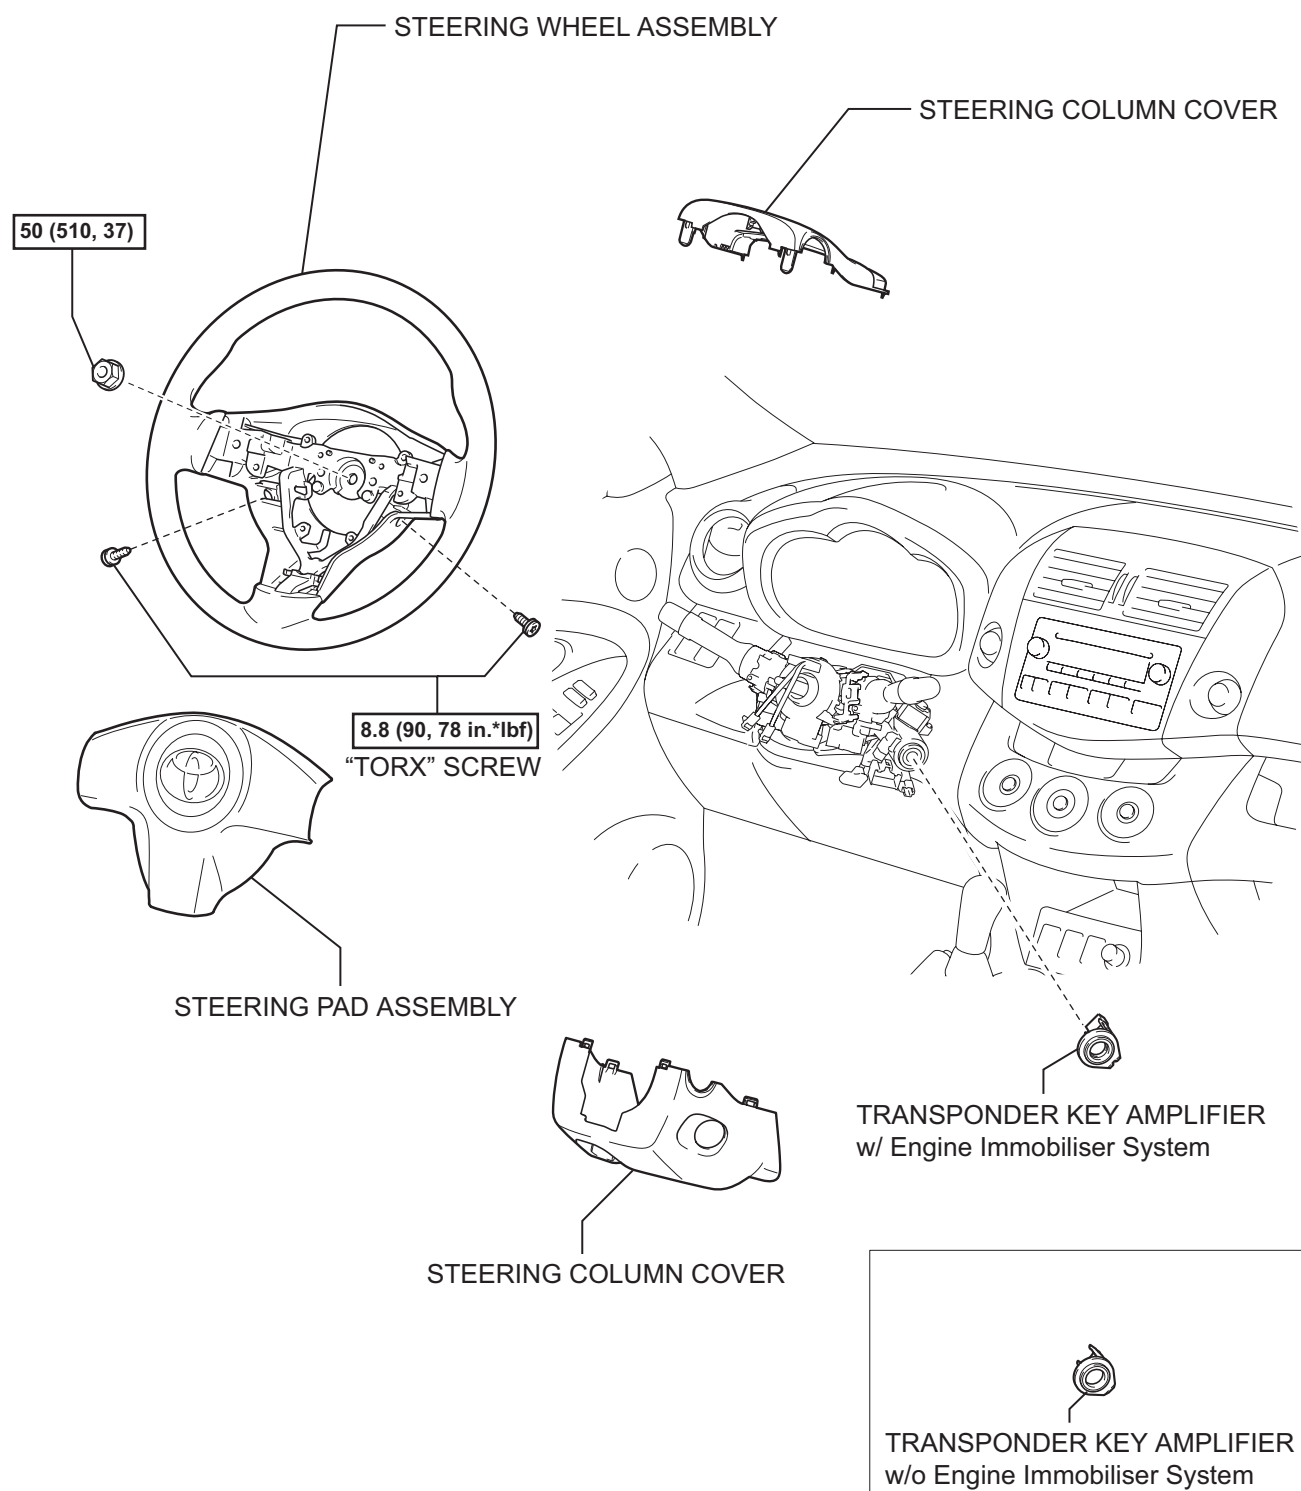


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY**
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
3. **REMOVE STEERING PAD ASSEMBLY** (See page [RS-336](#))
4. **REMOVE STEERING WHEEL ASSEMBLY** (See page [SR-12](#))
5. **REMOVE STEERING COLUMN COVER** (See page [SR-12](#))
6. **REMOVE TRANSPONDER KEY AMPLIFIER** (See page [SR-14](#))

INSPECTION

1. **INSPECT TRANSPONDER KEY AMPLIFIER**
 - (a) w/ Engine immobiliser system:
 - (1) Connect the battery's positive (+) lead to terminal 2 and the negative (-) lead to terminal 6, and then check that the light comes on.
OK:
LED illuminates.
If the result is not as specified, replace the transponder key amplifier.
 - (b) w/o Engine immobiliser system:
 - (1) Connect the battery's positive (+) lead to terminal 2 and the negative (-) lead to terminal 1, and then check that the light comes on.
OK:
LED illuminates.
If the result is not as specified, replace the transponder key amplifier.

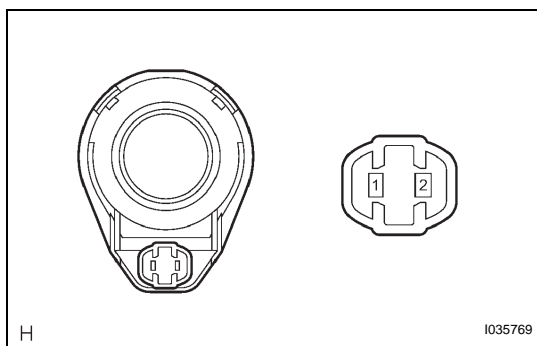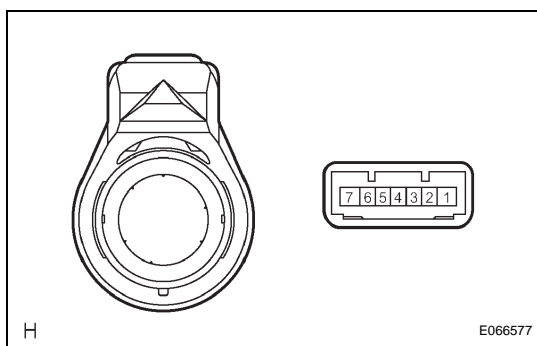

INSTALLATION

1. **INSTALL TRANSPONDER KEY AMPLIFIER** (See page [SR-18](#))
2. **INSTALL STEERING COLUMN COVER** (See page [SR-20](#))
3. **INSTALL STEERING WHEEL ASSEMBLY** (See page [SR-21](#))
4. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
5. **INSPECT STEERING WHEEL CENTER POINT**
6. **INSTALL STEERING PAD ASSEMBLY** (See page [RS-336](#))
7. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
8. **INSPECT STEERING PAD ASSEMBLY** (See page [RS-337](#))
9. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-337](#)).